



ACCES I/O PRODUCTS INC  
10623 Roselle Street, San Diego, CA 92121  
TEL (858)550-9559 FAX (858)550-7322

---

# **MODEL ROB-24(H)**

## **USER MANUAL**

FILE: MROB24HC3b



## **Notice**

The information in this document is provided for reference only. ACCES does not assume any liability arising out of the application or use of the information or products described herein. This document may contain or reference information and products protected by copyrights or patents and does not convey any license under the patent rights of ACCES, nor the rights of others.

IBM PC, PC/XT, and PC/AT are registered trademarks of the International Business Machines Corporation.

Printed in USA. Copyright 1995 by ACCES I/O Products Inc, 10623 Roselle Street, San Diego, CA 92121. All rights reserved.

## **Warranty**

Prior to shipment, ACCES equipment is thoroughly inspected and tested to applicable specifications. However, should equipment failure occur, ACCES assures its customers that prompt service and support will be available. All equipment originally manufactured by ACCES which is found to be defective will be repaired or replaced subject to the following considerations.

## **Terms and Conditions**

If a unit is suspected of failure, contact ACCES' Customer Service department. Be prepared to give the unit model number, serial number, and a description of the failure symptom(s). We may suggest some simple tests to confirm the failure. We will assign a Return Material Authorization (RMA) number which must appear on the outer label of the return package. All units/components should be properly packed for handling and returned with freight prepaid to the ACCES designated Service Center, and will be returned to the customer's/user's site freight prepaid and invoiced.

## **Coverage**

**First Three Years:** Returned unit/part will be repaired and/or replaced at ACCES option with no charge for labor or parts not excluded by warranty. Warranty commences with equipment shipment.

**Following Years:** Throughout your equipment's lifetime, ACCES stands ready to provide on-site or in-plant service at reasonable rates similar to those of other manufacturers in the industry.

## **Equipment Not Manufactured by ACCES**

Equipment provided but not manufactured by ACCES is warranted and will be repaired according to the terms and conditions of the respective equipment manufacturer's warranty.

## **General**

Under this Warranty, liability of ACCES is limited to replacing, repairing or issuing credit (at ACCES discretion) for any products which are proved to be defective during the warranty period. In no case is ACCES liable for consequential or special damage arising from use or misuse of our product. The customer is responsible for all charges caused by modifications or additions to ACCES equipment not approved in writing by ACCES or, if in ACCES opinion the equipment has been subjected to abnormal use. "Abnormal use" for purposes of this warranty is defined as any use to which the equipment is exposed other than that use specified or intended as evidenced by purchase or sales representation. Other than the above, no other warranty, expressed or implied, shall apply to any and all such equipment furnished or sold by ACCES.

## Table of Contents

<b>Notice</b> .....	<b>iii</b>
<b>Warranty</b> .....	<b>iv</b>
<b>Chapter 1: Introduction</b> .....	<b>1-1</b>
Controlling ROB-24 .....	1-2
Specifications .....	1-3
<b>Chapter 2: Installation</b> .....	<b>2-1</b>
CD Installation .....	2-1
3.5-Inch Diskette Installation .....	2-1
Directories Created on the Hard Disk .....	2-2
Installing the Card .....	2-4
Power Connections .....	2-5
Configurations .....	2-5
<b>Chapter 3: Connector Pin Assignments</b> .....	<b>3-1</b>

## List of Figures

Figure 2-1: ROB-24 Layout .....	2-6
---------------------------------	-----

## List of Tables

Table 3-1: Connector Pin Assignments for the 50-Pin Connector .....	3-1
Table 3-2: Connector Pin Assignments for the 37-Pin Connector .....	3-2

# Chapter 1: Introduction

ROB-24 is a twenty-four channel electromechanical relay output accessory card. ROB-24H is identical except that higher power relays are used. On-board amplifiers allow the relays to be driven by any 24-bit group of any ACCES digital I/O card or from other manufacturer's LSTTL or NMOS/CMOS-compatible digital output cards that use 37 or 50-pin connections compatible with the pin connections listed later in this manual. When an input bit is high, the associated relay is energized and a red LED associated with each relay glows when that relay is actuated.

SPDT Form C relays are standard but DPDT Form C relays are an available option. The relays used are UL-recognized, non-latching, polarized units designed to FCC Part 68 isolation requirements and can switch up to three amperes current into a resistive load at voltages up to 120 VAC (rms).

The card is normally powered by +5 VDC external power but an option is available for 115 VAC, 60 Hz external power. In both cases, screw terminals are provided for termination of input power connections.

As mentioned earlier, either card may be interfaced to any 24-bit port of an ACCES IOD-Series card. Relay numbers and corresponding port-bit assignments are as follows:

Relay	Port Bit	Relay	Port Bit
1	PA0	13	PC4
2	PA1	14	PC5
3	PA2	15	PC6
4	PA3	16	PC7
5	PA4	17	PB0
6	PA5	18	PB1
7	PA6	19	PB2
8	PA7	20	PB3
9	PC0	21	PB4
10	PC1	22	PB5
11	PC2	23	PB6
12	PC3	24	PB7

## **Controlling ROB-24**

---

Programming ROB-24 is done by simple OUT statements. For example, if the card is to be controlled by an ACCES model IOD-24E located at base address hex 310, C statements would be as follows:

```
OUTPORTb(0x313,0x80);      //Sets the ports to use as outputs
OUTPORTb(0x310,1);        //Activates Port A, bit 0 (Relay 0)
OUTPORTb(0x311,16);       //Activates Port B, bit 4 (Relay 21)
```

Alternatively, any parallel, TTL-compatible, source can be used to drive the relays and would be programmed according to instructions provided by the manufacturer. Please assure that the pin-out and cable configuration is compatible with the ROB-24 pin assignments listed on the following pages.



## Specifications

---

### Logic Inputs (24 Lines)

- Logic High: 2.0 to 5.0 VDC.
- Logic Low: 0 to 0.8 VDC.
- Input Load (Hi): 70 microamperes.
- Input Load (Lo): 600 microamperes.

### Relay Outputs (ROB-24)

- Contacts: Form C, SPDT, non-latching (DPDT is an option).
- Contact Material: Gold overlay silver.
- Contact Rating: Max. Switching Current: 2A DC, 1.5 AC.  
Max. Carry Current: 2A AC or DC.  
Max. Switching Power: 30 W DC - 60 V AC.  
Max. Switching Voltage: 150 VDC or 220 V AC.
- Actuate Time @ nominal voltage: 8 milliseconds max. including bounce
- Release Time @ nominal voltage: 8 milliseconds max. including bounce
- Vibration: 10 to 55 Hz, 10 g
- Shock: No Contact Opening: 10 g (11 mSec sine half wave)
- Life Expectancy: Mechanical: 20 x 10<sup>6</sup> operations minimum.

### Note

Good safety practice should be followed if AC voltages are to be switched by the relays

### Relay Outputs (ROB-24H)

- Contacts: Form C, SPDT (DPDT is an option)
- Contact Material: Gold overlay silver
- Contact Rating: Max. Carry Current: 4 A.  
Max. Switching Voltage: 125 VDC, 250 VAC  
Max. Switching Power: 84 W, 360 VA

## Power Required

### DC Power

- ROB-24: +5 VDC ( $\pm 5\%$ ) at 2 amperes maximum (all relays ON)
- ROB-24H: +5 VDC ( $\pm 5\%$ ) at 4 amperes maximum (all relays ON)

### AC Power Option

- ROB-24: 115 VAC, 60 Hz at 310 mA max. (all relays ON)
- ROB-24H: 115 VAC, 60 Hz at 390 mA max. (all relays ON)

## Environmental

- Operating Temperature Range: 0 °C. to 50 °C.
- Storage Temperature Range: -30 °C. to 105 °C.
- Humidity: 45 to 85% RH, non-condensing
  
- Dimensions: 16" long x 4.75" wide x 2" high. (406 mm x 121 mm x 51 mm)
- Weight: 2.25 lbs. Max (model ROB-24-1-2)
- Screw Terminal Wire Spacing: 0.2 " (5 mm)
- Screw Terminal Wire Sizes: 12-22 AWG

## Chapter 2: Installation

The software provided with this card is contained on either one CD or multiple diskettes and must be installed onto your hard disk prior to use. To do this, perform the following steps as appropriate for your software format and operating system. Substitute the appropriate drive letter for your CD-ROM or disk drive where you see `d:` or `a:` respectively in the examples below.

### CD Installation

---

#### DOS/WIN3.x

1. Place the CD into your CD-ROM drive.
2. Type `d:K` to change the active drive to the CD-ROM drive.
3. Type `installK` to run the install program.
4. Follow the on-screen prompts to install the software for this card.

#### WIN95/98/NT

- A. Place the CD into your CD-ROM drive.
- B. The CD should automatically run the install program after 30 seconds. If the install program does not run, click `START | RUN` and type `d:install`, click `OK` or press `K`.
- C. Follow the on-screen prompts to install the software for this card.

### 3.5-Inch Diskette Installation

---

As with any software package, you should make backup copies for everyday use and store your original master diskettes in a safe location. The easiest way to make a backup copy is to use the `DOS DISKCOPY` utility.

In a single-drive system, the command is:

```
diskcopy a: a:K
```

You will need to swap disks as requested by the system.

In a two-disk system, the command is:

```
diskcopy a: b:K
```

This will copy the contents of the master disk in drive A to the backup disk in drive B.

To copy the files on the master diskette to your hard disk, perform the following steps.

- a. Place the master diskette into a floppy drive.
- b. Change the active drive to the drive that has the diskette installed. For example, if the diskette is in drive A, type a:K.
- c. Type installK and follow the on-screen prompts.

## **Directories Created on the Hard Disk**

---

The installation process will create several directories on your hard disk. If you accept the installation defaults, the following structure will exist.

### **[CARDNAME]**

Root or base directory containing the SETUP.EXE setup program used to help you configure jumpers and calibrate the card.

**DOS\PSAMPLES:** A subdirectory of [CARDNAME] that contains Pascal samples.

**DOS\CSAMPLES:** A subdirectory of [CARDNAME] that contains "C" samples.

**Win32\language:** Subdirectories containing samples for Win95/98 and NT.

### **WinRisc.exe**

A Windows dumb-terminal type communication program designed for RS422/485 operation. Used primarily with Remote Data Acquisition Pods and our RS422/485 serial communication product line. Can be used to say hello to an installed modem.

### **ACCES32**

This directory contains the Windows 95/98/NT driver used to provide access to the hardware registers when writing 32-bit Windows software. Several samples are provided in a variety of languages to demonstrate how to use this driver. The DLL provides four functions (InPortB, OutPortB, InPort, and OutPort) to access the hardware.

This directory also contains the device driver for Windows NT, ACCESNT.SYS. This device driver provides register-level hardware access in Windows NT. Two methods of using the driver are available, through ACCES32.DLL (recommended) and through the DeviceIOControl handles provided by ACCESNT.SYS (slightly faster).

## **SAMPLES**

Samples for using ACCES32.DLL are provided in this directory. Using this DLL not only makes the hardware programming easier (MUCH easier), but also one source file can be used for both Windows 95/98 and WindowsNT. One executable can run under both operating systems and still have full access to the hardware registers. The DLL is used exactly like any other DLL, so it is compatible with any language capable of using 32-bit DLLs. Consult the manuals provided with your language's compiler for information on using DLLs in your specific environment.

## **VBACCES**

This directory contains sixteen-bit DLL drivers for use with VisualBASIC 3.0 and Windows 3.1 only. These drivers provide four functions, similar to the ACCES32.DLL. However, this DLL is only compatible with 16-bit executables. Migration from 16-bit to 32-bit is simplified because of the similarity between VBACCES and ACCES32.

## **PCI**

This directory contains PCI-bus specific programs and information. If you are not using a PCI card, this directory will not be installed.

## **SOURCE**

A utility program is provided with source code you can use to determine allocated resources at run-time from your own programs in DOS.

## **PCIFind.exe**

A utility for DOS and Windows to determine what base addresses and IRQs are allocated to installed PCI cards. This program runs two versions, depending on the operating system. Windows 95/98/NT displays a GUI interface, and modifies the registry. When run from DOS or Windows3.x, a text interface is used. For information about the format of the registry key, consult the card-specific samples provided with the hardware. In Windows NT, NTioPCI.SYS runs each time the computer is booted, thereby refreshing the registry as PCI hardware is added or removed. In Windows 95/98/NT PCIFind.EXE places itself in the boot-sequence of the OS to refresh the registry on each power-up.

This program also provides some COM configuration when used with PCI COM ports. Specifically, it will configure compatible COM cards for IRQ sharing and multiple port issues.

## **WIN32IRQ**

This directory provides a generic interface for IRQ handling in Windows 95/98/NT. Source code is provided for the driver, greatly simplifying the creation of custom drivers for specific needs. Samples are provided to demonstrate the use of the generic driver. Note that the use of IRQs in near-real-time data acquisition programs requires multi-threaded application programming techniques and must be considered an intermediate to advanced programming topic. Delphi, C++ Builder, and Visual C++ samples are provided.

**Findbase.exe**

DOS utility to determine an available base address for ISA bus , non-Plug-n-Play cards. Run this program once, before the hardware is installed in the computer, to determine an available address to give the card. Once the address has been determined, run the setup program provided with the hardware to see instructions on setting the address switch and various option selections.

**Poly.exe**

A generic utility to convert a table of data into an nth order polynomial. Useful for calculating linearization polynomial coefficients for thermocouples and other non-linear sensors.

**Risc.bat**

A batch file demonstrating the command line parameters of RISCTerm.exe.

**RISCTerm.exe**

A dumb-terminal type communication program designed for RS422/485 operation. Used primarily with Remote Data Acquisition Pods and our RS422/485 serial communication product line. Can be used to say hello to an installed modem. RISCTerm stands for Really Incredibly Simple Communications TERMinal.

**Installing the Card**

---

The ROB-24 and ROB-24H are installed external to the host computer. The card is supplied with four 0.375" stand-offs and may be installed on user-supplied panels/chassis. The card provides headers for both 37- and 50-conductor ribbon cable connection to the host computer and screw terminal terminations for the relay outputs. Silk-screen labels on the board identify the relay elements to which they connect. The screw terminals used can accommodate wire sizes as large as #14 AWG.

To ensure that there is minimum susceptibility to EMI and minimum radiation, it is important that EMI cabling and break-out techniques be used. (cable connected to ground at the aperture of the digital I/O card that will provide signals, twisted pair wiring, etc.)

## Power Connections

---

Connector J3 is provided for easy application of +5 VDC computer power via a quick disconnect cable from the computer power bus. Screw terminals are also provided for 5-volt external power to the card at TB13. (Note: Jumper JP1 must be installed if you intend to apply power through the screw terminals.) Alternatively, when the AC Power option is installed, JP1 should not be installed and the AC power is applied at TB13.

The following page illustrates the layout of both ROB-24 and ROB-24H.

## Configurations

---

There are optional configurations for ROB-24 and ROB-24H. These are as follows:

- ROB-24-S01: The "S01" signifies that the card is configured for 115 VAC power input. When this option is installed, AC power must be applied at TB13 as described above. Also, IC drivers U1, U3, U4, U6, U7, and U9 are omitted.
- ROB-24-S02: The "S02" option provides DPDT relay outputs.
- ROB-24-S03: When this option is included, the card can accept inputs from an unbuffered digital I/O card.
- ROB-24-S05: Normally, inputs are pulled down to ground through 680  $\Omega$  resistors. However, when option "S05" is included, inputs are pulled up to +5 VDC by means of jumpers at locations labeled JP2, JP3, and JP4.

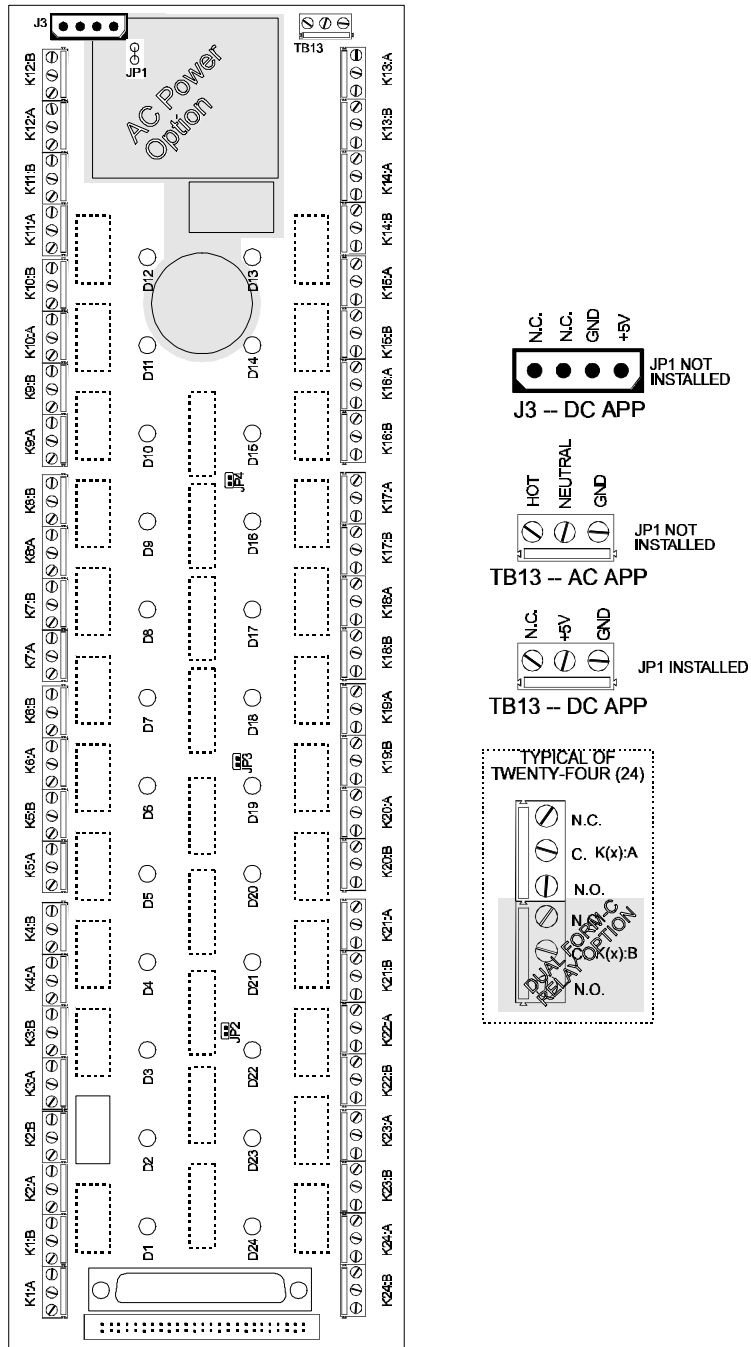


Figure 2-1: ROB-24 Layout





## Chapter 3: Connector Pin Assignments

Either the 50-pin ribbon cable header (J2) or the 37-pin cable header (J1) is used to interface to the digital output board in the host computer. The mating connectors are a type AMP 1-746285-0 or equivalent (50 pins) or type AMP 745242-1 (37 pins) for insulation displacement flat cables or Cannon DC37-S (37 pins) for soldered connections.

Pin	Assignment	Pin	Assignment
1	Relay K16	2	Ground
3	Relay K15	4	"
5	Relay K14	6	"
7	Relay K13	8	"
9	Relay K12	10	"
11	Relay K11	12	"
13	Relay K10	14	"
15	Relay K9	16	"
17	Relay K24	18	"
19	Relay K23	20	"
21	Relay K22	22	"
23	Relay K21	24	"
25	Relay K20	26	"
27	Relay K19	28	"
29	Relay K18	30	"
31	Relay K17	32	"
33	Relay K8	34	"
35	Relay K7	36	"
37	Relay K6	38	"
39	Relay K5	40	"
41	Relay K4	42	"
43	Relay K3	44	"
45	Relay K2	46	"
47	Relay K1	48	"
49	Not Used	50	"

**Table 3-1:** Connector Pin Assignments for the 50-Pin Connector

Pin	Assignment	Pin	Assignment
1	Not Used	19	Not Used
2	Not Used	20	Not Used
3	Relay K24	21	Digital Common
4	Relay K23	22	Relay K16
5	Relay K22	23	Relay K15
6	Relay K21	24	Relay K14
7	Relay K20	25	Relay K13
8	Relay K19	26	Relay K12
9	Relay K18	27	Relay K11
10	Relay K17	28	Relay K10
11	Digital Common	29	Relay K9
12	Not Used	30	Relay K8
13	" "	31	Relay K7
14	" "	32	Relay K6
15	" "	33	Relay K5
16	" "	34	Relay K4
17	" "	35	Relay K3
18	" "	36	Relay K2
		37	Relay K1

**Table 3-2:** Connector Pin Assignments for the 37-Pin Connector

## Customer Comments

If you experience any problems with this manual or just want to give us some feedback, please email us at: [manuals@accessioproducts.com](mailto:manuals@accessioproducts.com). Please detail any errors you find and include your mailing address so that we can send you any manual updates.



10623 Roselle Street, San Diego CA 92121  
Tel. (619)550-9559 FAX (619)550-7322  
[www.accessioproducts.com](http://www.accessioproducts.com)