

# **MODEL USB3-104-HUB**

# INDUSTRIAL FOUR PORT USB 3.1 HUB USER MANUAL

FILE: MUSB3-104-HUB.B1c

# Notice

The information in this document is provided for reference only. ACCES does not assume any liability arising out of the application or use of the information or products described herein. This document may contain or reference information and products protected by copyrights or patents and does not convey any license under the patent rights of ACCES, nor the rights of others.

IBM PC, PC/XT, and PC/AT are registered trademarks of the International Business Machines Corporation.

Printed in USA. Copyright by ACCES I/O Products Inc., 10623 Roselle Street, San Diego, CA 92121. All rights reserved.

# WARNING!!

# ALWAYS CONNECT AND DISCONNECT YOUR FIELD CABLING WITH THE COMPUTER POWER OFF. ALWAYS TURN COMPUTER POWER OFF BEFORE INSTALLING A CARD. CONNECTING AND DISCONNECTING CABLES, OR INSTALLING CARDS INTO A SYSTEM WITH THE COMPUTER OR FIELD POWER ON MAY CAUSE DAMAGE TO THE I/O CARD AND WILL VOID ALL WARRANTIES, IMPLIED OR EXPRESSED.

#### Warranty

Prior to shipment, ACCES equipment is thoroughly inspected and tested to applicable specifications. However, should equipment failure occur, ACCES assures its customers that prompt service and support will be available. All equipment originally manufactured by ACCES which is found to be defective will be repaired or replaced subject to the following considerations.

# **Terms and Conditions**

If a unit is suspected of failure, contact ACCES' Customer Service department. Be prepared to give the unit model number, serial number, and a description of the failure symptom(s). We may suggest some simple tests to confirm the failure. We will assign a Return Material Authorization (RMA) number which must appear on the outer label of the return package. All units/components should be properly packed for handling and returned with freight prepaid to the ACCES designated Service Center, and will be returned to the customer's/user's site freight prepaid and invoiced.

# Coverage

First Three Years: Returned unit/part will be repaired and/or replaced at ACCES option with no charge for labor or parts not excluded by warranty. Warranty commences with equipment shipment.

Following Years: Throughout your equipment's lifetime, ACCES stands ready to provide on-site or in-plant service at reasonable rates similar to those of other manufacturers in the industry.

# **Equipment Not Manufactured by ACCES**

Equipment provided but not manufactured by ACCES is warranted and will be repaired according to the terms and conditions of the respective equipment manufacturer's warranty.

#### General

Under this Warranty, liability of ACCES is limited to replacing, repairing or issuing credit (at ACCES discretion) for any products which are proved to be defective during the warranty period. In no case is ACCES liable for consequential or special damage arriving from use or misuse of our product. The customer is responsible for all charges caused by modifications or additions to ACCES equipment not approved in writing by ACCES or, if in ACCES opinion the equipment has been subjected to abnormal use. "Abnormal use" for purposes of this warranty is defined as any use to which the equipment is exposed other than that use specified or intended as evidenced by purchase or sales representation. Other than the above, no other warranty, expressed or implied, shall apply to any and all such equipment furnished or sold by ACCES.

# **TABLE OF CONTENTS**

Chapter 1: Introduction	5
Features	
Applications	
Functional Description	
Ordering Guide	6
Model Options	6
Optional Accessories	6
Included with your USB3-104-HUB	6
Figure 1-1: Block Diagram	7
Figure 1-2: Enclosure Label	
Chapter 2: Installation	9
Software CD Installation	9
Hardware Installation	9
Chapter 3: Hardware Details	
Figure 3-1: Option Selection Map	
USB Connectors	
LEDs	
External Power	
Locking DC Power Jack	
Non-locking DC Power Jack (economy version)	
Screw Terminals	
WI Option	
Chapter 4: Specifications	
Customer Comments	

# Chapter 1: Introduction

The USB3-104-HUB is a high performance and low cost solution for rugged, reliable, USB expansion. It is compliant with the USB 3.1 specification as well as being fully backwards compatible with all previous versions of USB. Each of the four downstream ports are capable of SuperSpeed (SS), Hi-Speed (HS), Full-speed, and Low-Speed transfers.

#### Features

- 4-port USB 3.1 Gen 1 hub with data transfers up to 5Gbps
- Rugged, industrial grade (-40°C to 85°C) operation
- Locking USB and power connectors prevent accidental disconnects
- SuperSpeed (5Gbps), Hi-Speed (480Mbps), Full-Speed (12Mbps), and Low-Speed (1.5Mbps) transfers supported
- Supports bus-powered and self-powered modes, accessible via DC power jack and a pair of screw terminals
- LED for power, and per port RGB LEDs to indicate overcurrent fault, High-Speed, and SuperSpeed
- Compact, steel, low-profile enclosure
- RoHS compliant

# **Applications**

- Portable / Laptop
- Education / Laboratory
- Industrial Automation
- Embedded OEM
- Military Systems Expansion

# **Functional Description**

The USB3-104-HUB is an industrial-grade 4-port USB hub optimized for harsh and rugged environments. This hub has locking / latching connectors on upstream and downstream ports as well as power, preventing accidental disconnects - making it perfect for applications that require vibration proofing. By using a USB-IF and Windows Hardware Quality Lab (WHQL) certified hub controller, compatibility is assured. The rugged steel enclosure, locking / latching connections, and -40°C to +85°C operation makes the USB3-104-HUB stand out compared to commercially available hubs.

Each connection has been designed for rugged use without loose or intermittent cables disrupting your application. When externally powered the screw terminal or threaded DC Jack secure the power connection. PEM nuts on the enclosure at the Type B USB connector and jackscrews on the cable secure the upstream connection. Latching Type A ports provide high-retention (50N) downstream connections compatible with all industry-standard USB cables.

The hub supports SuperSpeed (SS), Hi-Speed (HS), Full-Speed, and Low-Speed on all ports. Each downstream port indicator lights Red, Green, or Blue (RGB) to indicate fault, USB2/High-Speed, or USB3/SuperSpeed, respectively. The hub also supports buspowered and self-powered applications. If downstream peripherals require more current,

the USB3-104-HUB can be configured in self-powered mode. External +5V can be supplied to the board, which will provide 900mA to each downstream port.

This product is fully protected from faulty peripherals. Each downstream port utilizes a power distribution switch providing overcurrent and short circuit protection. If a fault occurs, the power distribution switch will disable that port and illuminate the LED red. The disabled port can be re-enabled by clearing the fault and cycling power to the port.

The board is designed to be used in rugged industrial environments, but is small enough to fit nicely onto any desk or testing station. The module is PC/104 sized at 3.550" by 3.775", while the enclosure is approximately 4" x 4" x 1".

#### **Ordering Guide**

•	USB3-104-HUB	RoHS compliant industrial USB 3.1 Gen 1 hub with
		locking/latching connectors in rugged enclosure
		(includes 6' high-quality USB 3.1 locking cable)
•	USB3-104-HUB-E	Economy version with standard non-latching power and
		data connections (includes 6' high-quality USB 3.1 cable)

# **Model Options**

- -OEM Board only version (no enclosure)
- -WI Requires external power of 7 to 28VDC
- -TAN Tantalum Caps for high altitude usage (no electrolytics)
- -CC Conformal Coating for use in high humidity and dusty environments

# **Optional Accessories**

- PWR-ACDC-5V5A External Power Supply
- PWR-ACDC-5V5A-L External Power Supply with locking connector
- LF-JDC-PLUG Locking DC Power Plug w/sturdy backshell and solder tabs
- CAB-USB3LL 6' high-quality USB 3.1 cable w/screw locks on A & B ends
- MP104-DIN DIN rail mounting provision

# Included with your USB3-104-HUB

The following components are included in your shipment. Please take the time now to ensure that no items are damaged or missing.

- USB Module in labeled enclosure with an anti-skid bottom
- 6' USB 3.1 cable type A (non-locking) to locking type B (USB3 Vision compatible)

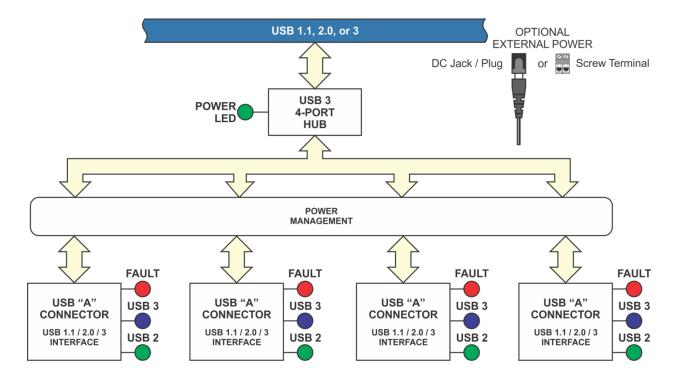


Figure 1-1: Block Diagram

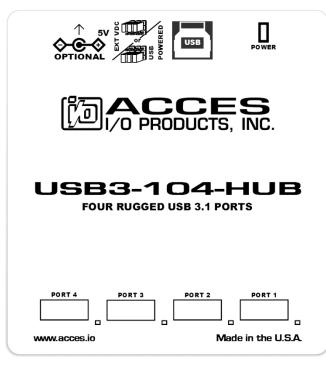


Figure 1-2: Enclosure Label

# **Chapter 2: Installation**

# **Software CD Installation**

No software is provided with this board. There is no need to install any drivers for the USB3-104-HUB product. It will enumerate as a Generic Hub using the USB Hub Class Driver that is built into Windows OS or Linux. There's no driver needed from the user.

# Hardware Installation

The unit can be connected to any USB 3.1, 3.0, 2.0 or USB 1.1 port.

# **Chapter 3: Hardware Details**

Refer to the Block diagram and the Option Selection Map when reading this section of the manual.

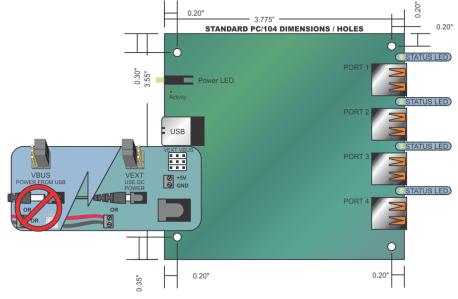


Figure 3-1: Option Selection Map

# **USB Connectors**

The upstream USB connector is a USB 3.1 Type B and connects to the host USB port with a standard "A to B" cable (provided). The host USB port provides communication signals along with +5 VDC power. Downstream USB connectors are latching USB 3.1 Type A (non-latching available as economy version).

# LEDs

A green LED on the front of the enclosure (next to the USB type B connector) is used to indicate power to the board. Four RGB LEDs are next to the four downstream Type A connectors.

# **External Power**

When more current is needed than the upstream USB port can provide there are a few methods available to provide external power.

# • Locking DC Power Jack

DC1 is a locking DC jack (Switchcraft RAPC10P) that has a 2.00mm post on board and is designed to be used with our +5 VDC AC/DC external power supply that is optionally available (model PWR-ACDC-5V5A-L).

# • Non-locking DC Power Jack (economy version)

DC1 is a standard DC jack that has a 2.00mm post on board and is designed to be used with our +5 VDC AC/DC external power supply that is optionally available.

#### • Screw Terminals

TB1 is a two-position screw terminal that provides a method for the user to connect the external power +5V and return (GND). Note that power applied through TB1 must follow the USB specification of providing no more than +5.25V and no less than +4.75V (+5V $\pm$ 5%).

# WI Option

With the "Wide Input" power factory option, provide between 7VDC and 28VDC as external power instead of 5VDC, via the screw terminals, or via the DC jack. We recommend ordering the optional external locking DC plug (LF-JDC-PLUG) to integrate into your system power supply harness.

# **Chapter 4: Specifications**

Bus Type:	USB 3.1 Gen 1 / 2.0 / 1.1 Super (5Gbps) / Hi (480Mbps) Full (12Mbps) / Low (1.5Mbps) Four Type A downstream ports			
Environmental Operating & Storage: Humidity: Board Size: Enclosure Size: Weight:	-40° to +85°C 5-95% non-condensing 3.550" x 3.775" 3.985" x 3.990" x 1.045" 284 grams (with enclosure) 65.8 grams (-OEM version)			
Cable	6' USB3 Vision cable Type B with thumbscrews to standard Type A			
<b>Power</b> Optional ext. power	No external power <i>required</i> Connect via screw terminals, a locking DC jack / plug or standard jack / plug			
Optional Wide Input	-WI, 7 to 28VDC Input			
USB3.1 Bus Powered	Up to 480mA at 5VDC required Up to 620mA for a single port and as little as 420mA shared between all four ports is available to power downstream devices.			
Externally Powered	900mA available per downstream port			
USB2.0 Bus Powered	Up to 200mA at 5VDC required Up to 390mA for a single port and as little as 300mA shared between all four ports is available to power downstream devices.			
Externally Powered	900mA available per downstream port			
Connectors USB Type A Latching Retention up to 50 Newtons Physical shock: Per EIA-364-27 Condition H (11ms 30G) Vibration: Per EIA-364-28D				
USB Type B & A DC Jack (locking) (MIL-STD-202G)	Condition V, Test A 8 Newtons disconnect non-locking Vibration: Method 201A Ins. Resistance: Method 302 Condition B Thermal Shock: Method 107G Temperature: -40-105°C (-40-+221°F)			
DC Jack (HOH-IOCKINg	DC Jack (non-locking) 2.22 Newtons disconnect			

# USB 3.1 vs USB 3.0

USB 3.0 was renamed to "USB 3.1 Gen 1" and operates at up to 5Gbps USB 3.1 Gen 2 supports 10Gbps



# **Customer Comments**

If you experience any problems with this manual or just want to give us some feedback, please email us at: *manuals@accesio.com*. Please detail any errors you find and include your mailing address so that we can send you any manual updates.



10623 Roselle Street, San Diego CA 92121 Tel. (858)550-9559 FAX (858)550-7322 www.accesio.com

Manual USB3-104-HUB